



PlayStation®Move motion controller /  
Manette de détection de mouvements PlayStation®Move

Instruction Manual / Mode d'emploi  
CECH-ZCM2U 3002522

NOTE: This product isn't compatible with PlayStation®3 systems.  
REMARQUE: Ce produit n'est pas compatible avec les systèmes PlayStation®3.

**ENGLISH**

**Precautions**

 
Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference.  
For assistance with this product, visit playstation.com/helpme.

**Caution**

- Keep this product out of the reach of small children. Small children may swallow small parts or may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.
- Avoid prolonged use of this product. Take a break at about 30 minute intervals.
- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands, wrists or arms during use. If the condition persists, discontinue use and consult a doctor.
- This product is intended for use only with the hands.
- The vibration function of this product may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms.
- When using the motion controller, avoid holding the controller closer than 8 inches from the face or eyes.
- When using the PlayStation®Move motion controller, be aware of the following points. If the motion controller hits a person or an object, it may cause accidental injury or damage.
- Do not use with the USB cable connected.
  - Attach the supplied strap to the motion controller and wear the strap on your wrist.
  - When using the motion controller, hold the controller firmly to help prevent the controller from being thrown accidentally. Furthermore, avoid swinging the controller with excessive force.
  - Before use, make sure that there is plenty of space around you.
  - Do not handle damaged or leaking lithium-ion batteries.



**3 Wear the strap on your wrist.**

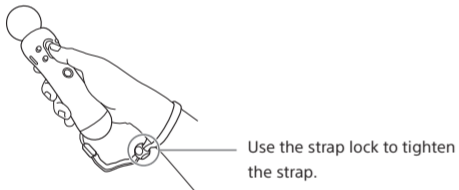

**Hints**

- Press and hold the T button to use the motion controller to navigate menus. Press the Move button or X button to select an item.
- To quit a game, press and hold the PS button, and then follow the on-screen instructions.

**Configuring the controller settings**

Select (Settings) ➔ [Devices] ➔ [Controllers] from the function screen.

<b>Enable Vibration</b>	Turn the vibration function on or off. Clearing the checkbox disables the function, and the controller won't vibrate even if you enable vibration in the game settings.
-------------------------	---

**Hint**

You can also adjust some settings while playing a game. Press and hold the PS button, and then follow the on-screen instructions.

**Charging the motion controller**

Charge the motion controller by connecting it to a PS4™ system that is turned on, using a USB cable. While the motion controller is charging, the status indicator blinks slowly. When charging is complete, the status indicator turns off.

**Hints**

- Use the USB cable supplied with your PS4™ system.
- You can also charge the controller while the PS4™ system is in rest mode. From the PS4™ system's function screen, go to (Settings) ➔ [Power Save Settings] ➔ [Set Features Available in Rest Mode] ➔ [Supply Power to USB

**Use and handling**

- Do not hold the sphere too tight or place objects on top of it, as doing so may cause it to become misshapen.
- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not touch the connectors of the motion controller.
- Do not allow liquid, small particles or other foreign objects to get into the motion controller.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored.
  - Wipe with a soft, dry cloth.
  - Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Do not allow the battery to come into contact with fire or subject it to extreme temperatures such as in direct sunlight, in a vehicle exposed to the sun or near a heat source.
- Never disassemble or modify the product.

**FCC and IC notice**

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption rate (SAR).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**NOTES:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If you have questions about this product, visit playstation.com/helpme.


Declaration of Conformity	
Trade Name:	SONY
Model No.:	CECH-ZCM2U
Responsible Party:	Sony Electronics Inc.
Address:	16535 Via Esprillo, San Diego, CA 92127 U.S.A.
Telephone No.:	858-942-2230
This device complies with Part 15 of the FCC Rules and Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	

**Part names**


**Front**

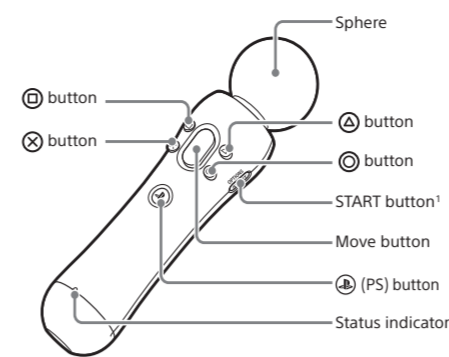

**Rear**

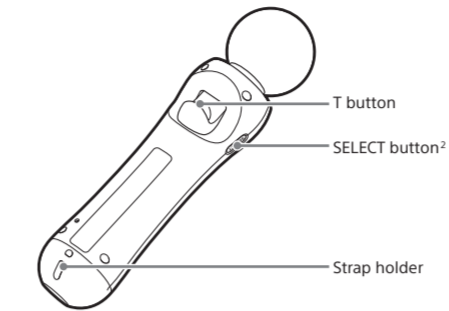 

**Bottom**

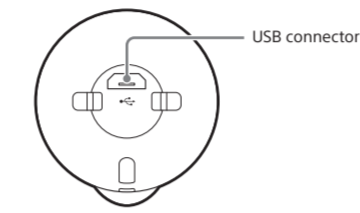 

<sup>1</sup> Use this button in place of the OPTIONS button.  
<sup>2</sup> Use this button in place of the SHARE button.

Ports, and then select an option other than [Off].


- Check the battery charge level on the screen by pressing and holding the PS button.

**Battery**

 - Battery duration might vary depending on usage conditions and environmental factors.
- The battery has a limited lifespan. Battery charge duration gradually decreases with repeated usage and age. Battery life also varies depending on the storage method, usage state, environment and other factors.
- Charge in an environment where the temperature range is between 10 °C-30 °C (50 °F-86 °F). Charging may not be as effective when performed in other environments.

**Resetting the motion controller**

If the motion controller responds abnormally or does not work as intended, try resetting it by pressing the reset button on the back of the controller with a fine-tipped object such as a pen.

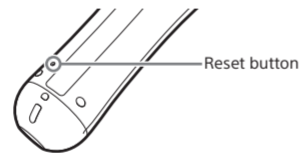

**Storage**

If you don't plan to use the motion controller for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

**End of life product recycling**

The motion controller is made of plastics, metals and a lithium-ion battery. Follow local regulations when disposing of the system. Sony products can be recycled for free in the United States and Canada by dropping the product off at a number of nationwide locations.

Visit [www.sony.com/electronics/eco/environmental-management](http://www.sony.com/electronics/eco/environmental-management) for details.

**Getting started**

**Pairing the motion controller**

The first time you use a motion controller, you'll need to pair it with your PS4™ system. You only need to do this the first time you use the motion controller.

- 1 Turn on your PS4™ system.
- 2 Connect the motion controller to your PS4™ system. Use the USB cable supplied with your PS4™ system.
- 3 Press the PS button on the motion controller to pair it with your PS4™ system.
- 4 Remove the USB cable.

**Hints**

- Use PS4™ system software version 4.70 or later.
- You can use up to four motion controllers at one time. To use two or more motion controllers, pair each controller separately.
- Pairing a motion controller with another system clears the previous pairing.

**Connecting/setting up a camera**

To use the motion controller you'll also need to connect and set up a PlayStation®Camera (sold separately). For details, refer to the instruction manual for the PlayStation®Camera.

**Using the motion controller**

<b>Notice</b>
Always disconnect the USB cable before use.

- 1 Turn on your PlayStation®4 system.
- 2 Press the PS button on the motion controller. The controller is automatically assigned to a user.

**LIMITED WARRANTY**

Sony Interactive Entertainment LLC (SIE LLC) warrants to the original purchaser that this product shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty does not apply to any consumables (such as batteries). For defects in material or workmanship within the warranty period, upon showing a proof of purchase, SIE LLC agrees for a period of one (1) year to either repair or replace this product with a new or factory recertified product at SIE LLC's option. For the purpose of this Limited Warranty, "factory recertified" means a product that has been returned to its original specifications. Visit playstation.com/helpme or call 1-800-345-7669 to receive a return authorization and shipping instructions.

This warranty shall not be applicable and shall be void if the defect in the SIE LLC product has arisen through abuse, unreasonable use, mistreatment, neglect, or means other than from a defect in materials or workmanship. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE SIE LLC. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE (1) YEAR PERIOD DESCRIBED ABOVE. IN NO EVENT WILL SIE LLC BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THE SIE LLC PRODUCT. SOME STATES OR PROVINCES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

This warranty is valid only in the United States and Canada.

